



**SUPPLEMENTARY INSTALL GUIDE
MITSUBISHI EVOLUTION X
2009~ (CZ4A)
U.S.A. VERSIONS ONLY**





WARNING



ALWAYS REMEMBER TO DISCONNECT THE BATTERY WHEN INSTALLING ELECTRICAL EQUIPMENT TO PREVENT AIRBAG DEPLOYMENT AND/OR CHECK ENGINE LIGHTS. FOLLOW STANDARD SAFETY INSTRUCTIONS WHEN WORKING ON YOUR VEHICLE.



IMPORTANT : USE ONLY WITH CORRESPONDING ARK DESIGN USER MANUAL

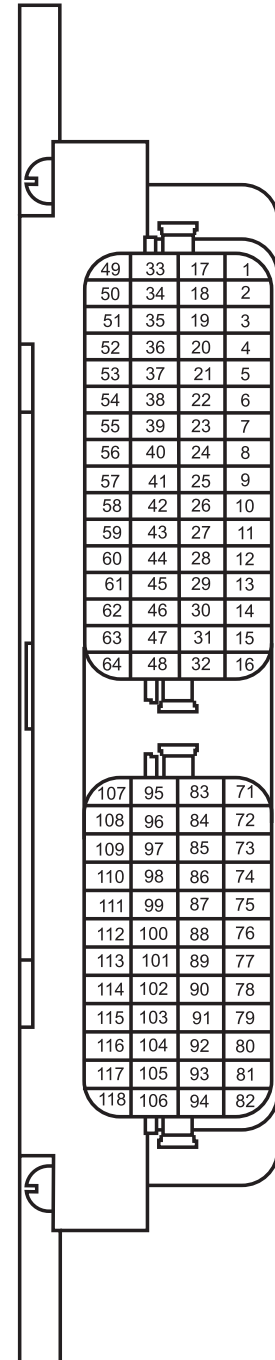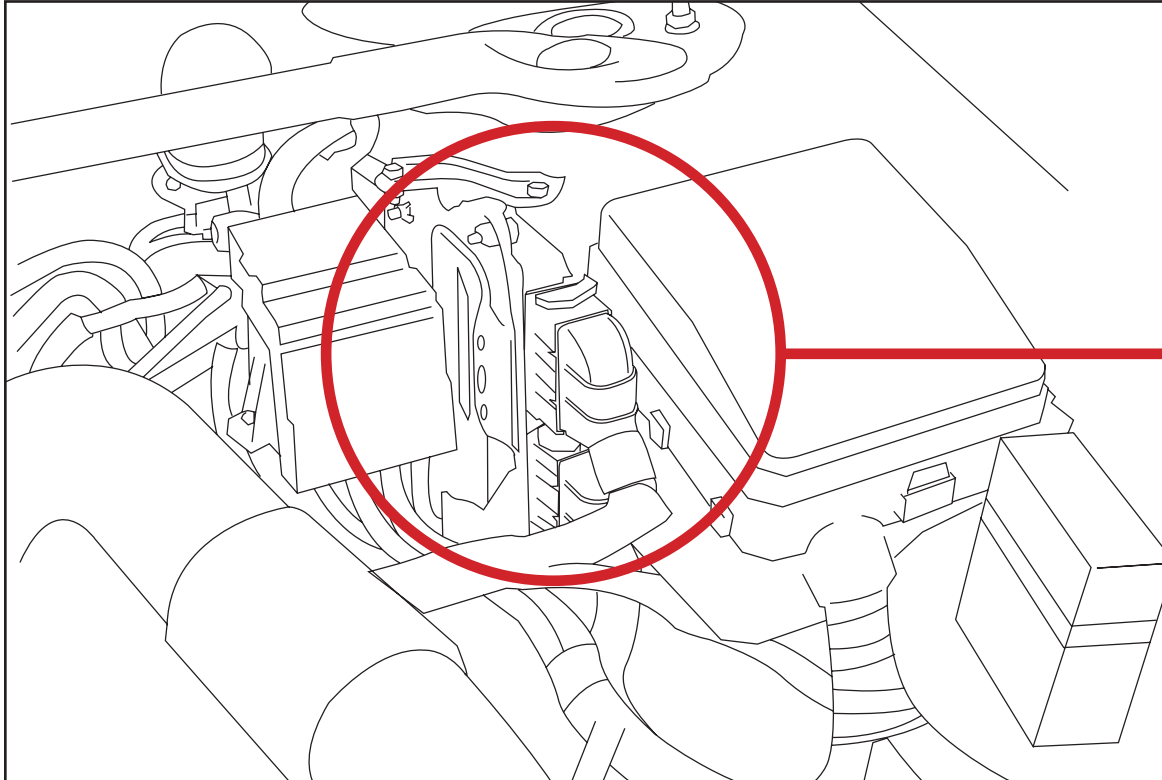

**PIN LOCATIONS
with
WIRE COLORS**

002	GREEN with WHITE + GREY DOT	
004	WHITE with RED + GREY DOT	
010	GREY with RED	
026	WHITE	
038	RED + GREY DOT	
039	LIGHT BLUE + GREY DOT	
071	BLACK + 2 GREY DOTS	
082	WHITE + 2 GREY DOTS	
104	RED + GREY DOT	




SUPPLEMENTARY INSTALL GUIDE



DOC# 01.001M.01

PN# 01-0001x-00
REV SHIFT TIMER

U.S. MARKET MITSUBISHI EVO X 2010- (CZ4A.US)

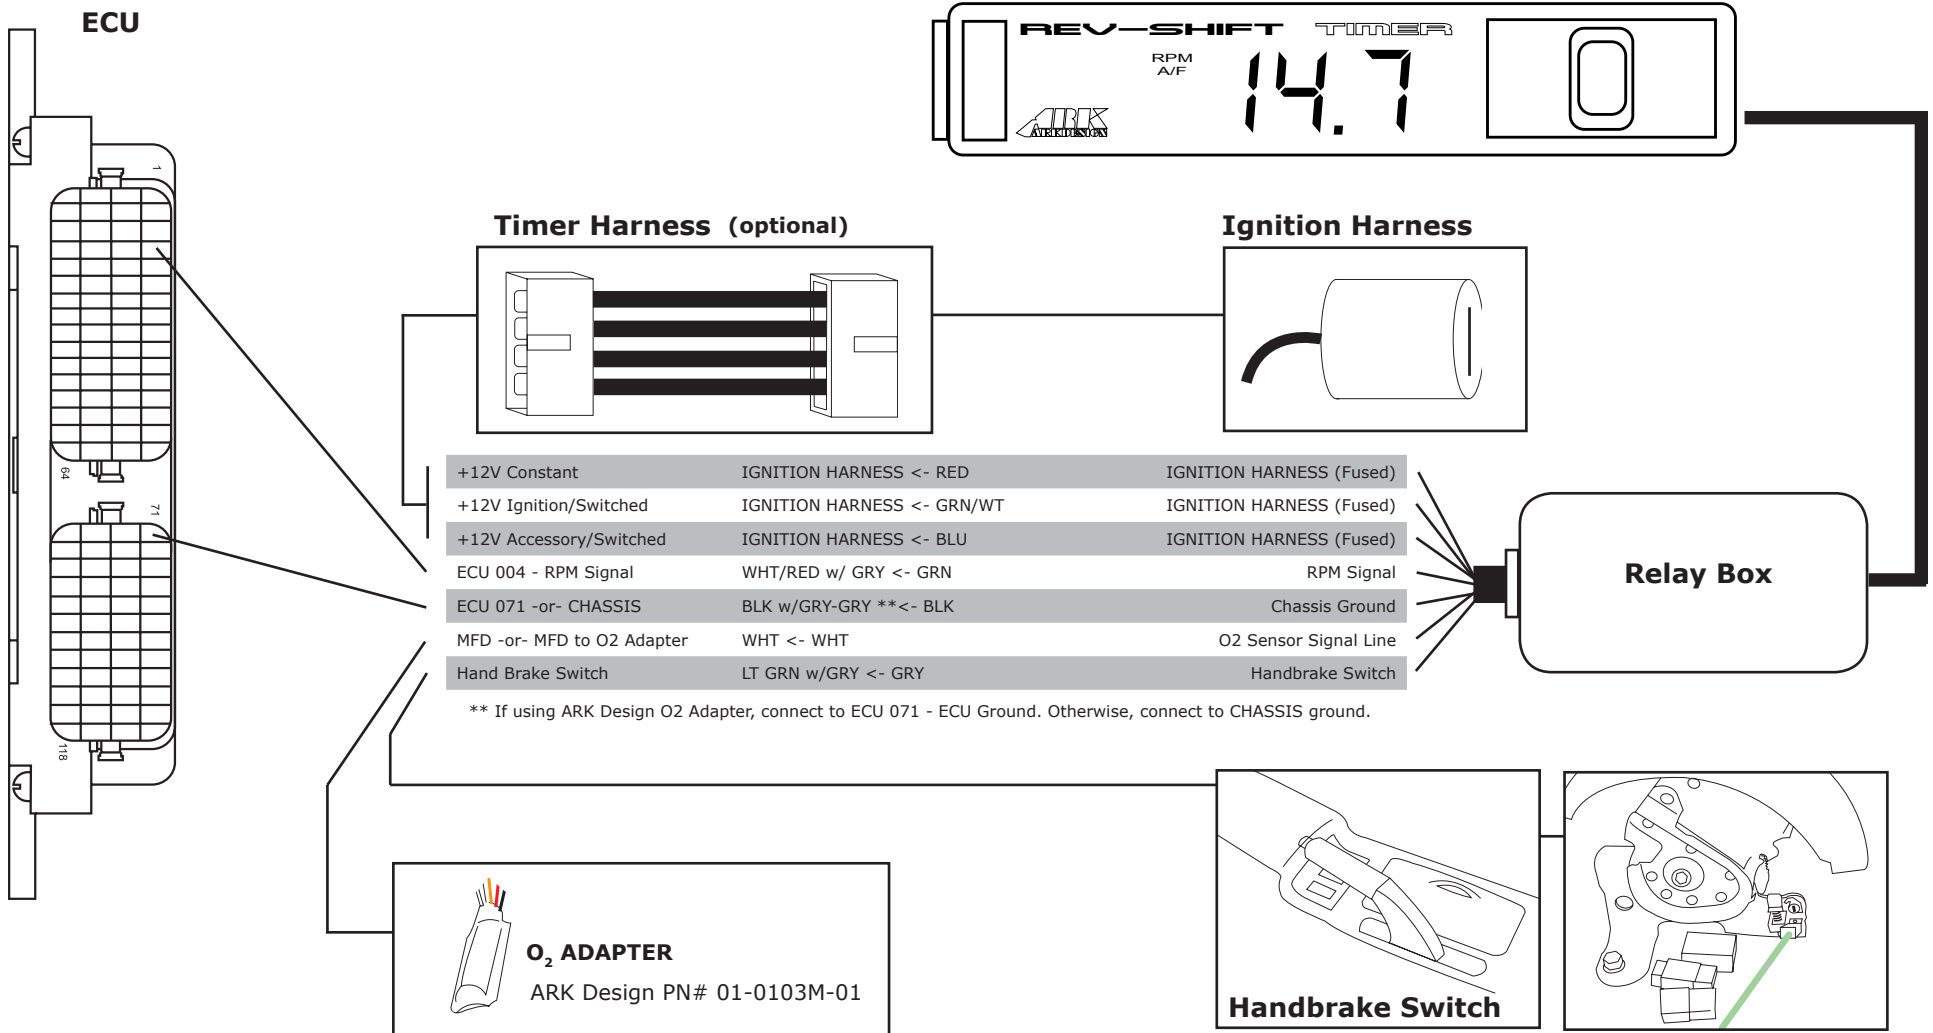

O₂ ADAPTER
ARK Design PN# 01-0103M-01

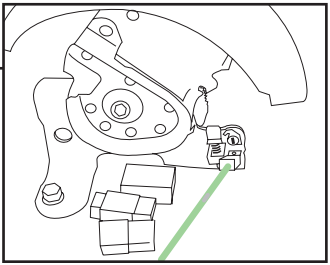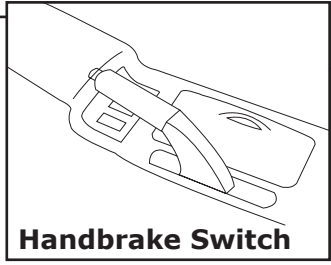

WARNING

ALWAYS REMEMBER TO DISCONNECT THE BATTERY WHEN INSTALLING ELECTRICAL EQUIPMENT TO PREVENT AIRBAG DEPLOYMENT AND/OR CHECK ENGINE LIGHTS. FOLLOW STANDARD SAFETY INSTRUCTIONS WHEN WORKING ON YOUR VEHICLE.

IGN HARNESS	RED		RED	+12V Constant
IGN HARNESS	GRN/WT		GRN/WT	+12V Ignition Switched
IGN HARNESS	BLU		BLU	+12V Accessory Switched
ECU 071 -or- CHASSIS	BLK w/GRY-GRY		BLK	Chassis Ground
ECU 004 - RPM Signal	WHT/RED		GRN	RPM Signal
Hand Brake Switch	LT GRN + GRY		GRY	Hand Brake Switch
MFD -or- MFD to O2 Adapter	WHT		WHT	O2 Sensor Signal Line